



WATERPROOF WIRELESS SPEAKER

USER MANUAL FOR WS 108



 
 
PRODUCT OVERVIEW



Micro USB Cable




AUX Cable

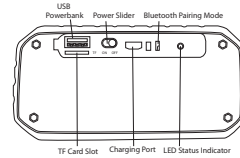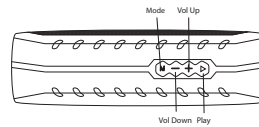


CHARGING YOUR SPEAKER

The battery must be fully charged prior to use. It takes approximately 4 hours to fully charge your Speaker (from depleted unit).

 A Via AC Adapter/Wall Charger: Using the provided Micro USB cable, connect your Speaker (Micro USB port) to the AC Adapter (USB port).

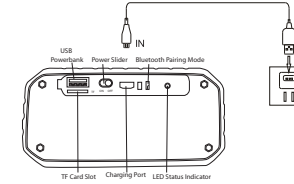

 B Via Computer: Using the provided Micro USB cable, connect your Speaker (Micro USB port) to the computer/laptop (USB port).

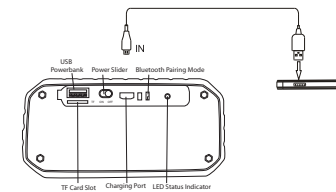

over →

PAIRING THE SPEAKER TO BLUETOOTH DEVICE

Make sure the Bluetooth function is available on your cell phone. Specific pairing procedures will be different depending on different cell phone. For detailed information, please refer to your cell phone's User Guide.

- After a successful pairing, devices will memorize each other. Therefore, no pairing will be needed next time.

1. Keep the distance between the cell phone and the speaker within 3 feet (for pairing only).
2. Turn on the speaker by sliding the power slider to "ON".
3. The tone prompt will sound. The unit will automatically enter into pairing mode.
4. Activate the Bluetooth function of the cell phone to search for the Bluetooth devices. After finishing the search, select "WS108" in the device list displayed.
5. Your WS108 speaker is ready to use.

SPEAKER CONTROLS

ON/OFF

Slide the power slider to "ON" to power on.
Slide the power slider to "OFF" to power off.

MUSIC

Go to next song
Press Button

Go to previous song
Press Button

FMRADIO

Go to next station
Press Button

Go to previous station
Press Button

Scan
Press Button

Plug the included 3.5mm auxiliary cable into the speaker. The cable acts as an external antenna to improve the reception of the radio. Switch to FM mode and enjoy.

PLAY/PAUSE/ANSWER/REFUSE THE CALL

Press button to answer the call, press it again to hang up.
Press and hold button for 2 seconds to refuse the call.
Double press button to call back the last number.
Press to play/pause the music.

CHANGING MODES

Your speaker is equipped with a FM receiver. To switch between Bluetooth and FM modes, Press the button. A tone will indicate which mode the speaker is currently in.

VOLUME


During a call or when listening to music.

Volume +
Press and hold Button.

Volume -
Press and hold Button.

CHARGING A DEVICE FROM A SPEAKER

Your speaker acts as a powerbank, so that you can charge your device. Connect your device to the USB powerbank port on the reverse of the speaker using your device's charging cord (not included). Your device will begin to charge automatically.

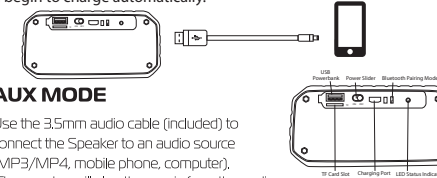

AUX MODE

Use the 3.5mm audio cable (included) to connect the Speaker to an audio source (MP3/MP4, mobile phone, computer). The speaker will play the music from the audio source.

IMPORTANT SAFEGUARDS

- Keep speaker away from any source of heat.
- Always adjust the speaker volume to a suitable level to avoid hearing damage or the damage to the unit.
- If not using the speaker for a long period of time, keep the internal battery charged (charge once every 3 months). This will extend the life of your lithium battery.

SPECIFICATIONS

Frequency: 20 Hz-20KHZ
Battery: 1200 mAh Li-Ion
Bluetooth version: 4.2
Distance: 33 ft (10m)
Charging time: 3 Hours
Playing time: 6 Hours

